


Contour

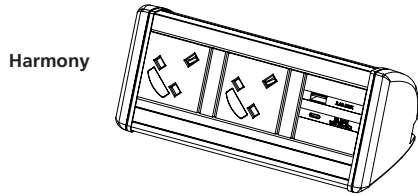


Harmony


UK sockets and USB charging shown for illustration purposes.

### Connecting to power

#### Connecting standard 3-pole connector

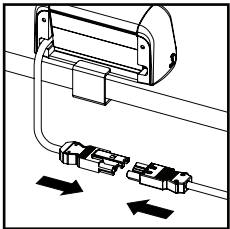


Plug the male 3-pole connector supplied as standard into a female powered connector.

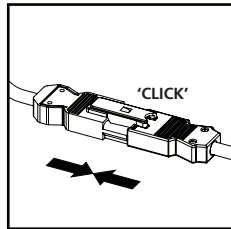


Ensure the attached locking mechanism clicks into place on both connectors.

#### Disconnecting standard 3-pole connector

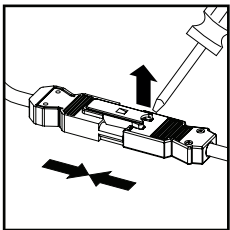


Use a suitable tool to release the locking mechanism.

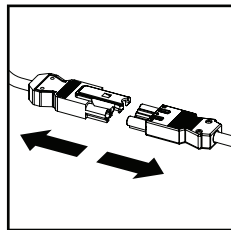


Separate the connectors.

### Contents

 


#### Fixing kits (supplied separately)

Refer to separate instructions included with the fixing kit ordered with your Contour/Harmony module.

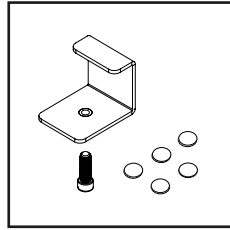


Standard Contour or Harmony C-clamp fixing kit

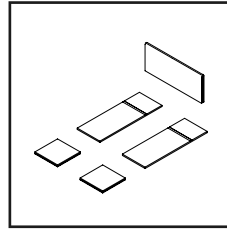


Standard Contour or Harmony adhesive fixing kit

### Connecting data/AV (if applicable)

#### If module supplied with keystone data/AV

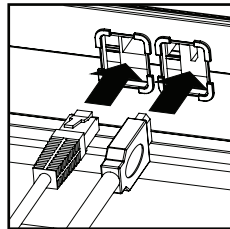


At the rear of module, insert data/AV cables into the keystones as shown.

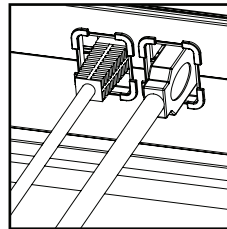


Ensure all connectors are fully inserted. Use suitable cable management for safety.

#### If module supplied with panel mount data/AV

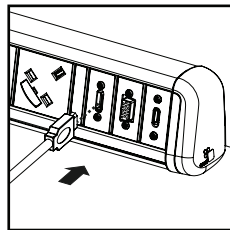


Plug your data/av cables in the sockets at the front of the module.

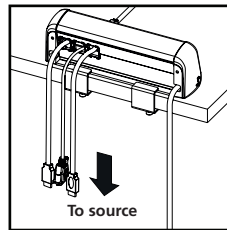


Connect the cables from the rear of the module into the source.

### Inserting and removing plugs

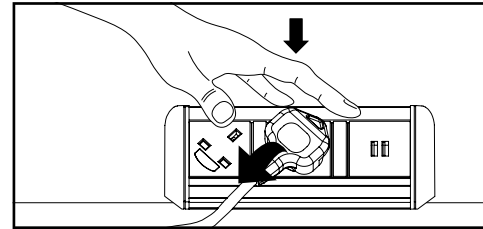

When inserting/removing plugs, please support the module with your free hand.

### Clamping guidance

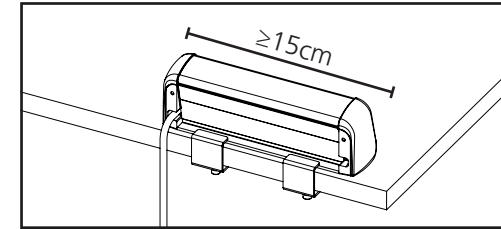

If the module is more than 15cm in length, it is recommended to use 2x C-clamp fixings.

### Additional information

#### Safety

- Installation is to be carried out in accordance with relevant Health & Safety regulations and only to be carried out by a skilled or competent person.
- The product should be installed to comply with the relevant national standards and be inspected and tested prior to being put into service (in the UK BS 7671 Wiring Regulations or BS 6396 Office and Educational Systems Best Practice).
- Isolate the supply before installation or repositioning. Any locking mechanisms must be used and fully engaged.
- Incorrect use could lead to risk of electrocution.
- Connectors must not be engaged or disengaged when under load or live.
- Product to be used only for the intended purpose of distributing power and data in office and commercial environments.
- Do not misuse, dismantle or re-configure the product because doing so will invalidate the warranty.
- If a product incorporates RCD protection, the RCD should be regularly tested in-line with current standards.

#### Standards

- Refer to the Declaration of Conformity.

#### Further guidance

- Fuse replacement only to be carried out by a skilled or competent person.
- Should the supply cable need replacing, contact CMD.

#### Product care

- Clean using a dry cloth. No abrasives or solvents to be used on the product.
- Do not drop or expose to moisture.

